

COMMAX CDV-70K USER MANUAL



Quick Links

- [Wiring and Connection Instructions](#)
- [Operation](#)
- [Specifications and Features](#)

Table of Contents

- [user manual](#)
- [Table of Contents](#)
- [Warnings and Cautions](#)
- [Part Names](#)
- [Package Contents](#)
- [Wiring and Connection Instructions](#)
- [Installation](#)
- [Operation](#)
- [Settings](#)
- [Specifications and Features](#)
- [Other ManualsLib Projects](#)

Since 1968

COMMAX
SmartHome & Security

User Manual

Color video door phone CDV-70K



www.commax.com

COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



Table of Contents

1. Warnings and Cautions.....	2
2. Part Names	3
3. Package Contents	3
4. Wiring and Connection Instructions.	4
5. Installation.....	4
6. Operation	5
7. Settings	6
8. Specifications and Features.....	7



 
1. Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.

 Warning It may cause a serious damage or injury if violated.  Caution It may cause a minor damage or injury if violated.	 Prohibition.  No disassembly  No touch  Must follow strictly.  Shows plugging out the power cord without an exception  Shows the warning and caution for an electric shock.  Shows the warning and caution for a fire.
---	---




Warning& Caution

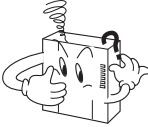Cleaning & Use	Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed). It may cause an electric shock or fire.    	If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center. It may cause an electric shock or fire.  	Please don't insert any metallic or burnable materials into the ventilation hole. It may cause an electric shock or fire.   	When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.) 
				
	No disassembly	Electric shock	Prohibition	Prohibition
	Electric shock	Fire	Electric shock	Fire


! Warning & Caution

Power & Installation

 
Please don't use several products at the same time on one power socket.
· It may cause a fire due to an abnormal overheating.



 
Please don't bend the power cable excessively or it may cause an electric shock.
· fire when using a damaged power cable.

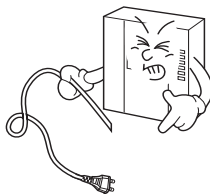

 
Please don't handle the power cable with a wet hand.
· It may cause an electric shock.

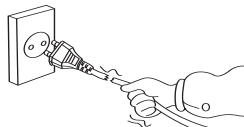

 
Please plug out the power cable from the socket when not using it for a long period of time.
· It may shorten the product lifespan or cause a fire.

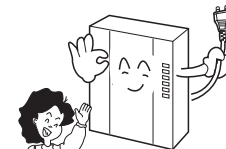

 
Please don't install the product in the place where there is much oil, smoke or humidity.
· It may cause an electric shock or fire.

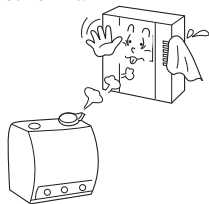

 
Please don't install the product with the lightning and thunder.
· It may cause an electric shock or fire.

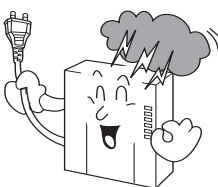

 Please don't use and connect this product with other products with different rated voltage.
· It may cause a disorder or fire.

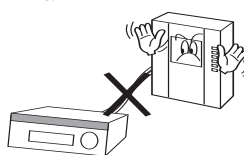


 When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.
· It may cause a fire due to the increased internal temperature.

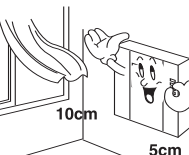


2. Parts Names

 
Handset Monitor

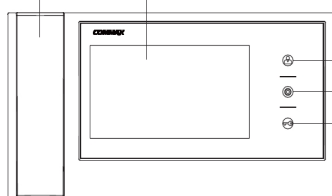

 Monitor Button
Interphone Button
Door Release Button

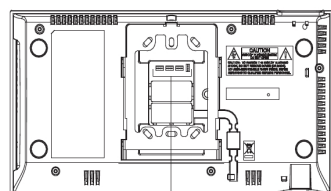

External Connection
Terminal

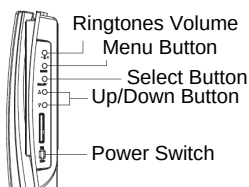 


Ringtone Volume
Menu Button
Select Button
Up/Down Button
Power Switch


3. Package Contents



 
Monitor Fixing
M3X6 Screw(1EA)



Wall Bracket Mounting
Screw T4X18(4EA)

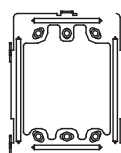 

Wall Bracket
for Monitor(1EA)

 

Connector 4P(2EA)



User Manual



 
4. Wiring and Connection Instructions

▷ Polarity of the camera connector

1. Red: Talk (Audio)
2. Blue: GND
3. Yellow: Power (+12V)
4. White: Video

▷ Polarity of interphone connector


1. Red: Talk (Audio)
2. Blue: GND
3. Yellow: Power (+14V)
4. White: Call signal

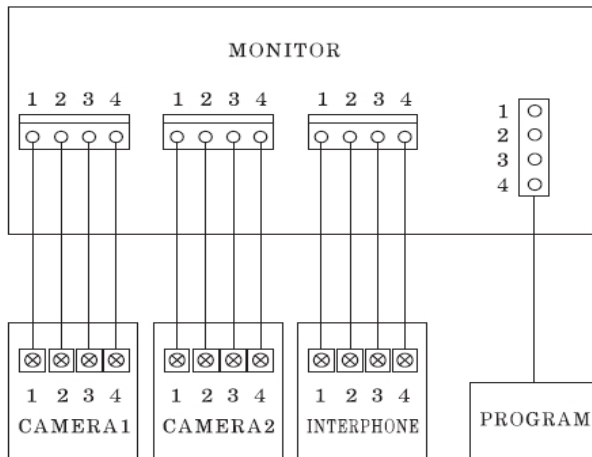

* Each device should be connected by separated cables.
If you use UTP CABLE[CAT.5] for CAMERA1 and CAMERA2, 2 lines of UTP cable are required.



 
5. Installation

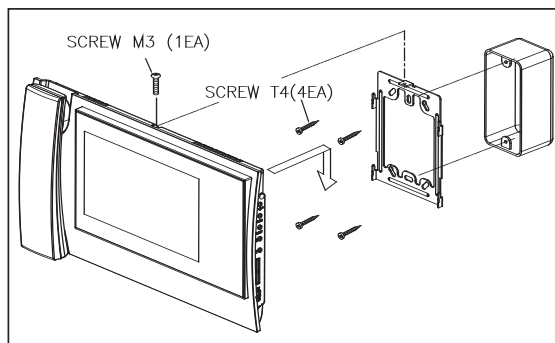

! Note

- ① Avoid the range of direct sunlight
- ② Recommended height is pertinent from 1450 ~ 1500mm
- ③ Avoid the installation near magnetic activity, humid temperatures and gas

 DOOR CAMERA & INTERPHONE Wiring

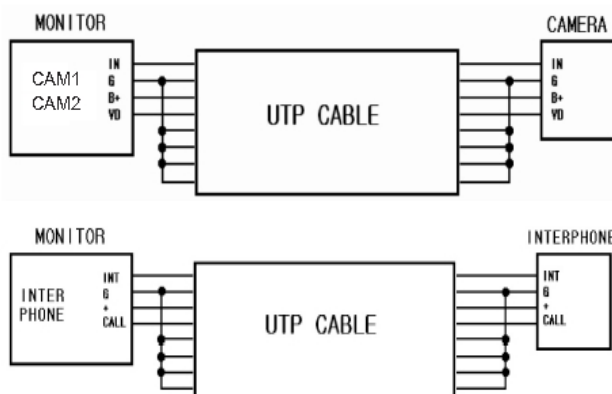


* If you use UTP CABLE[CAT.5], connect the rest 4 lines to GND after connecting 4 lines between monitor and interphone.





6. Operation

※ **Caution** : Do not hold the handset at your ear when you press hook switch to switch call.

 1. Calling of visitor

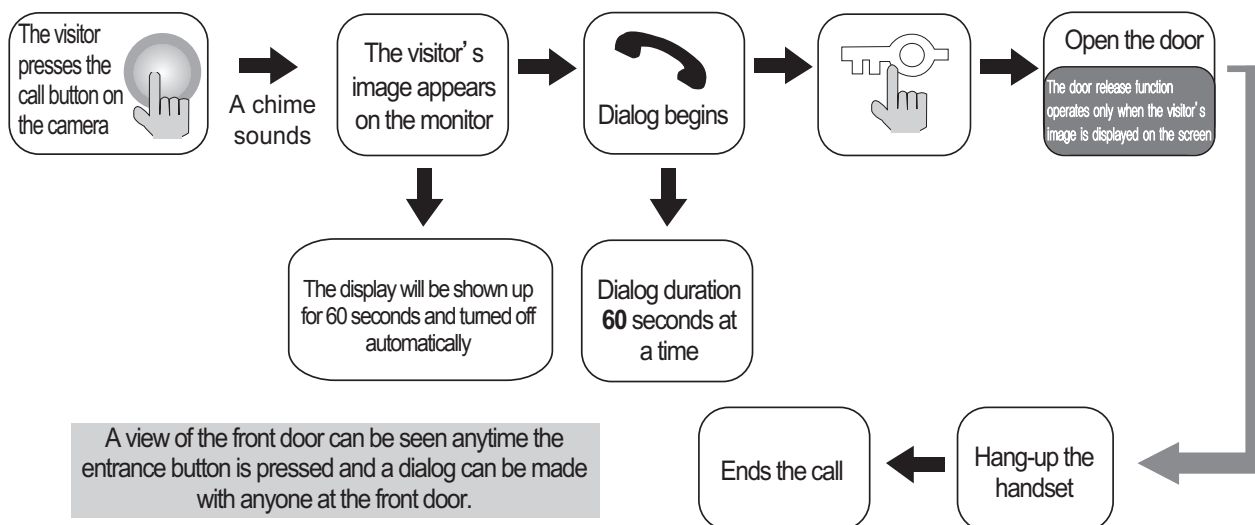

  2. Communication with the optional Interphone

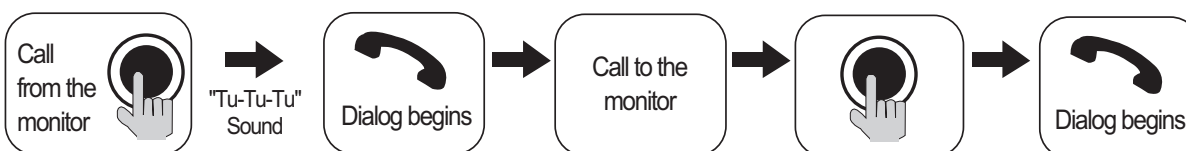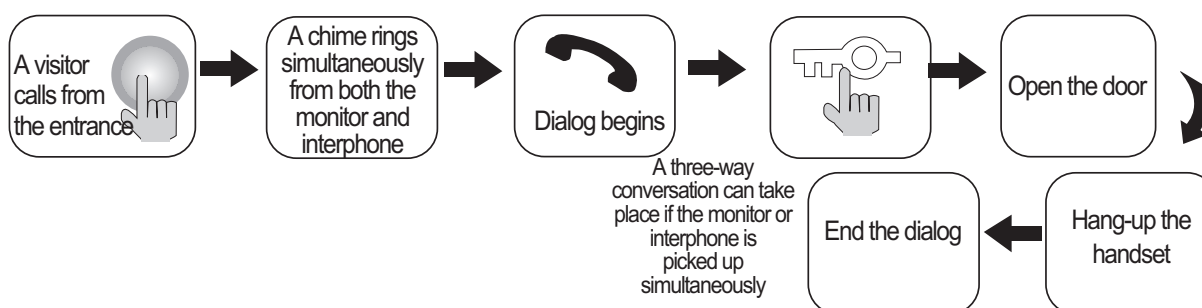

Dialog between the interphone and camera is possible only when the visitor's image is visible on the monitor screen.

3. Monitoring : function to see the image of visitor in the entrance.

(On stand-by mode - status of putting handset down) Operation

- By pressing the Monitor button repeatedly, the monitor will work as following in order.
Camera 1 → Camera 2 → OFF → Camera 1 →

(One talking mode - status of putting handset up) Operation

- By pressing the Monitor button repeatedly, the monitor will work as following in order.
Camera 1 → Camera 2 → Camera 1 → Camera 2 →



7. Settings

- You can adjust DOOR VIDEO SET, UTILITY and check INFORMATION(model name &version) with (UP)△ / (DOWN)▽ button after pressing Menu button on the front of the product in video talk mode or stand-by monitoring.
- **Products settings need the following 4 buttons on the right of product.**
 - * Start Menu / Exit : MENU button
 - * Select and in-put : SELECT (Interphonebutton)
 - * Move up / Move right : △/▷ (Open button)
 - * Move down / Move left : ▽/◁ (Monitoring button)

1. Screen setting (Brightness/Contrast/Color adjustment function)

Press the Menu button and access to DOOR VIDEO SET and enter the setting menu by pressing SELECT button.

(1) BRIGHTNESS : Adjusting Brightness of Screen

(2) CONTRAST : Adjusting Contrast of Screen

(3) COLOR : Adjusting Color of Screen

※ How to adjust

- ① Move to Menu you want to adjust with △/▽ button on the list of DOOR VIDEO SET
- ② Press SELECT button to choose an icon.
- ③ Adjust the set value with ◁/▷ button
- ④ To complete the set, press SELECT button.

(4) RESET : Initializing

※ How to Reset

- ① Move to RESET menu in DOOR VIDEO SET menu
- ② Press SELECT to enter the menu.
- ③ Select YES with ◁/▷ button
- ④ Press SELECT button.

(5) EXIT : Go back to setting mode

2. UTILITY(additional function)

Press the Menu button and access to Utility SET and enter the menu by pressing SELECT button.

(1) CHIME-BELL VOLUME : setting call sound level

- ① Move to CHIME-BELL VOLUME icon with △ /▽ button in UTILITY Menu.
- ② Press SELECT to enter the menu.
- ③ Adjusting call level : 0(MUTE) ~ 3(MAX)
- ④ To complete the set, press SELECT button.

(2) SCREEN MODE : to set for screen ratio

- ① ZOOM: Zoon in(expansion) image maintaining actual ratio(4:3) is shown. (full of the screen)
- ② 4:3: Image of 4:3 ratio without expansion is shown.(This is actual ratio for camera)
- ③ WIDE: Full of the screen. Not actual ratio (4:3). Image is expanded according to LCD (WIDE LCD) ratio.

※ How to adjust

- ① Access to SCREEN MODE with $\triangle$ / ∇ button in UTILITY Menu
- ② Press SELECT button to enter the menu.
- ③ Adjust screen ratio value with $\triangleleft$ / $\triangleright$ button.
- ④ To complete the set, press SELECT button.

(3) EXIT : Go back to Setting menu

3. INFORMATION (The function to check Model name & Version)

In order to check the product information, press menu button and move to INFORMATION menu with $\triangleleft$ / $\triangleright$ button.

- (1) MODEL : You can check the model name.
- (2) VERSION : You can check the model version.
- (3) VIDEO : You can check the video transmission formats(NTSC / PAL)
- (4) SOURCE : You can check the position of camera(DOOR1 / DOOR2) which is shown on the screen for now.

4. EXIT(Finish setting menu)

5. RESET : Initializing

Keep pushing interphone and door open button for 3 seconds(Screen setting and Call volume will be initialized)



8. Specifications and Features

Rated Voltage	100-240V~, 50/60Hz
Power Consumption	Stand-by : 4.5W Maximum : 16W
Wiring	4 wires with door camera (Polarity), 4 wires with an Interphone (Polarity)
Screen Size	17.78Cm(7") TFT-DIGITAL LCD
Communication	Simultaneous communication
Call Sound	From a door camera : Electric chime From an interphone : Beep sound
Screen Display	Monitoring : 30 $\pm$ 5sec , Talk : 60 $\pm$ 5sec
Distance from camera	28m(Φ 0.5) / 50m(Φ 0.65) / 70m(Φ 0.8)
Operating Temperature	0 ~ +40°C (32° F ~ 104° F)
Dimension	311(W) X 168(H) X 32(50.3)(D)



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea
Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133
Web site : www.commax.com
PM0270K00010

Printed In Korea / 2016.07.104

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages